 
 


MC45 Mounted Computer Quick Start Guide

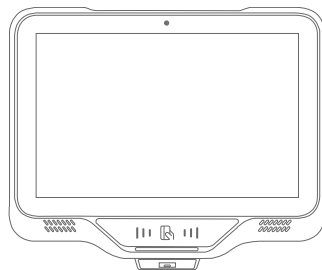 


Overview



Front (with NFC function)

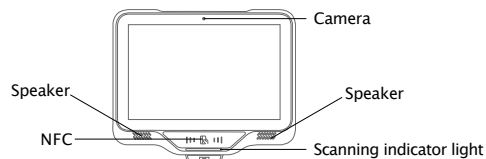


Front (without NFC function)

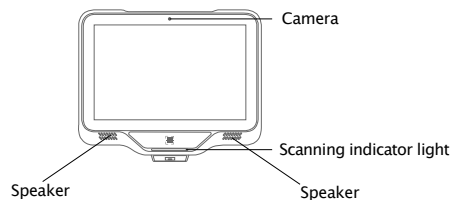

Back

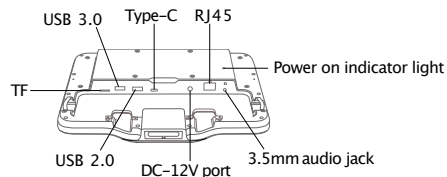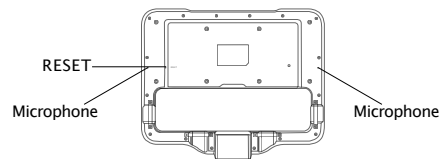  

Bottom

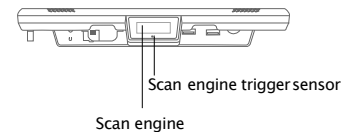 


Package Contents

- Device×1
- Power Adapter×1
- VESA Bracket
- Quick Start Guide×1
- Long Cross Screws×4
- M4.0*6.0 Cross Screws×5

Power Supply Instructions

 1. The MC45 mounted computer supports Power over Ethernet (PoE).
2. Connect the adapter to the DC-12V port and the other end to the device to complete the power supply.

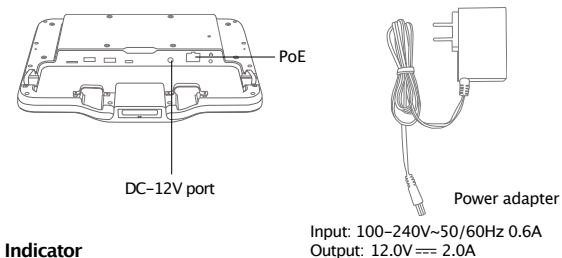

Indicator

	Powering
	Volume +
	Volume -
	Back
	Home
	Menu
	Wi-Fi connection
	Ethernet connection



Power Options

 
Power on and off: When powered, the MC45 mounted computer will automatically power on, and when powered off, it will automatically power off.

RESET Key Function


- 1. Screen PowerControl:** Use a pin to insert into the RESET hole on the back of the MC45 mounted computer to switch the screen on and off.
- 2. Device Restart:** Hold a pin to insert the RESET hole on the back of the MC45 mounted computer for 6 seconds to restart the device.
- 3. Recovery Mode:** In recovery mode, select the item to confirm the selection.

Install The VESA Bracket:


1. Use four M4.0*6.0 cross screws to connect the square steel plate to the back of the MC45 mounted computer, and tighten the screws with a screwdriver.

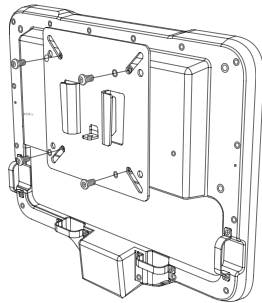

 2. Use four long cross screws to secure the trapezoidal small steel plate on the wall.

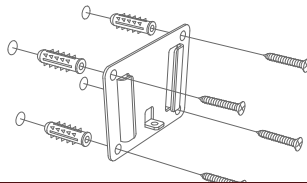

 3. After completing the above two steps, hang the MC45 mounted computer with the square steel plate onto the trapezoidal small steel plate and secure it with an M4.0*6.0 cross screw. The installation of the VESA bracket is now complete.

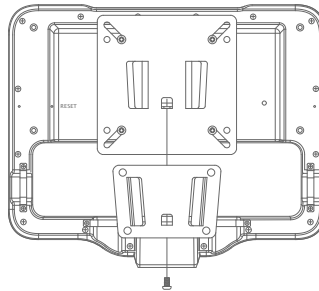
Precautions

1. Read all information in this guide before using the device to ensure safe and proper operation.
2. Please use only accessories that have been approved by MEFERI and correspond to this model. Using any unapproved power source, charger, or battery etc., may cause fire, explosion, or other hazards.
3. Please use the device and accessories within the specified temperature range. Equipment failure may occur if the ambient temperature is too high or too low.
4. If the battery is not detachable, do not attempt to replace it yourself to avoid damaging the battery or the device. Battery replacement should be performed by authorized service centers only.
5. Do not disassemble the product or its accessories. If the equipment or any of its components malfunction, contact and consult our after-sales service center, or send the device to one of our after-sales service outlets for testing and servicing.
6. If the battery exhibits any abnormal signs such as peculiar smell, overheating, color change, distortion, or leakage, remove it from the charger or the device immediately and cease usage.
7. The battery is made from flammable and explosive materials.

Do not disassemble, squeeze, drop, or subject the battery to any other destructive operations. Avoid placing the battery in high-temperature environments.

8. Disposal of used batteries must comply with local regulations and policies regarding battery disposal.

Warranty Policy

Warranty Terms:

- 1. Warranty Duration:** Under normal circumstances, the warranty period for the device is 12 months and 3 months for accessories, subject to the sales agreement.
- 2. Coverage Under Warranty:** During the product warranty period, if the product is used under normal conditions (as determined by our technical staff), the user is entitled to a free warranty for damaged or faulty parts.
- 3. Exclusions from Warranty:** During the warranty period, faults caused by repairs, disassembly, or modifications made by personnel other than our company, improper installation, misuse by the user (failure to follow instructions), serial number damage, accidents, or natural disasters will not be covered under the warranty.
- 4. Warranty Void Conditions:** The warranty will expire immediately if any alterations are made to the warranty card.
- 5. Repair Process:** Please present the equipment's serial number (SN) and purchase certificate when requesting repairs. The company reserves the right to interpret the contents of this policy.
- 6. Contact for Assistance:** If you encounter any issues when using the device, please email meferi@meferi.com.

