


ME40K Single Slot Cradle Quick Start Guide



Overview

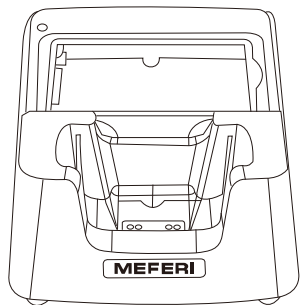

Front



Back






Plastic insert

Charging mode


a) ME40K Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the light indicator on the charger and MEFERI logo light will turn on. Insert the ME40K device into the cradle slot. The ME40K will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

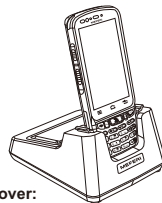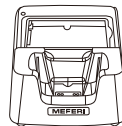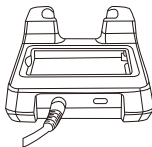


b) ME40K Charging With Protective Rubber Cover:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the light indicator on the charger and MEFERI logo light will turn on. Then remove the plastic insert from the charging station slot to enlarge the compartment and insert ME40K with a protective rubber cover into the cradle slot. The ME40K will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

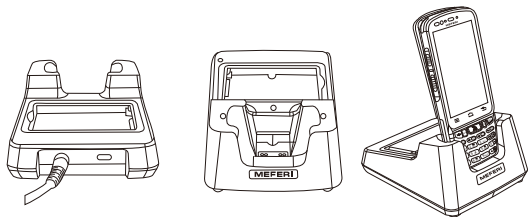


c) ME40K Charging With Pistol Grip:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the light indicator on the charger and MEFERI logo light will turn on. Insert the ME40K with Pistol Grip into the cradle slot. The ME40K will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

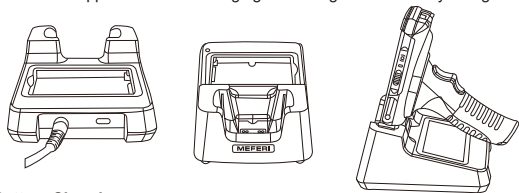

d) Battery Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the light indicator and MEFERI logo light on the cradle will turn on. Insert the battery into the additional compartment on the top of the cradle, ensuring proper alignment of the battery and charger contact connectors. The battery will now enter the charging state. During charging, the indicator light will appear red and turn green when the battery is fully charged. The battery can be charged independently or simultaneously with the ME40K device.

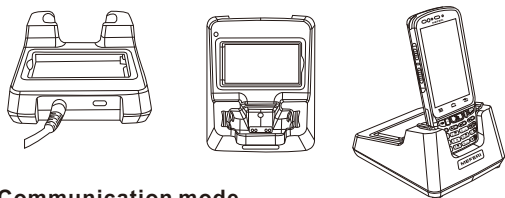

Communication mode

Connect the USB data cable to the Type-C interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light on the cradle will illuminate. Whether the ME40K uses accessories such as the Pistol Grip or protective rubber cover, it can be charged and exchanged data with a PC by simply plugging it into the single slot cradle. It's important to note that during communication mode, the single-slot cradle cannot charge the battery.

