



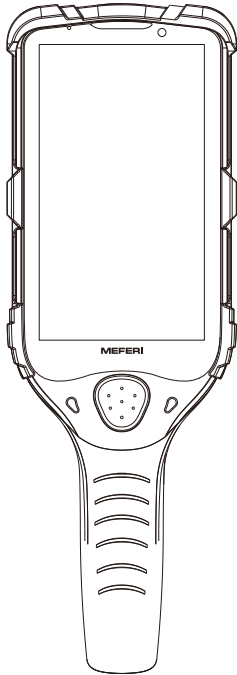

CIAO Intelligent Shopper Assistant Quick Start Guide



Overview

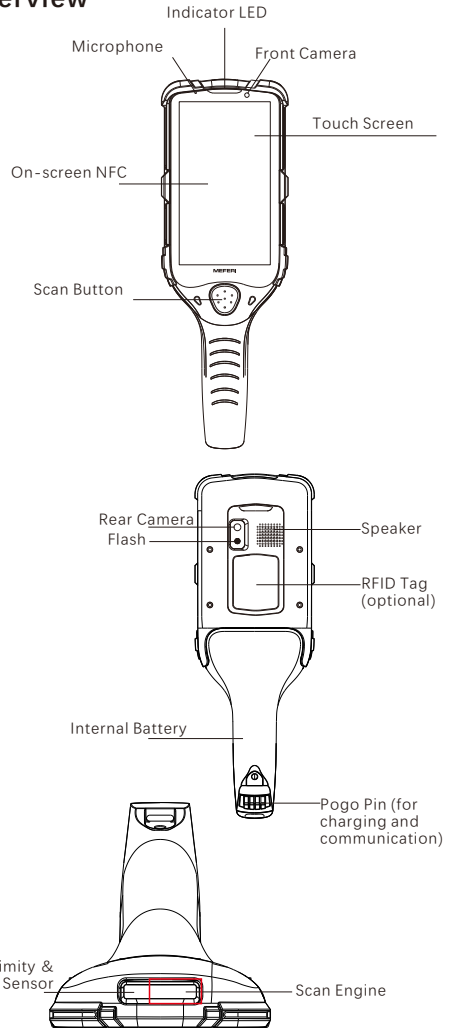






Power Options

- Power on: Press and hold the scan button until the device displays a startup animation.

Package Contents

- Device x1
- Quick Start Guide x1

Indicator

Battery		Full power
		Medium power
		Low power
Wi-Fi		Wi-Fi connected
		Wi-Fi switched off

Scan barcode

- Open the ScanEdge application.
- Position the scan head (laser) of the device directly at the barcode.
- Press the scan button on the device.
- The scan result will be displayed on the test whiteboard.



Precautions:

- 1. General Use:** Read all information in this guide before using the device to ensure safe and proper operation.
- 2. Approved Accessories:** Only use accessories that have been approved by MEFERI and correspond to this model. Using unapproved power sources, chargers, batteries, etc., may cause fire, explosion, or other hazards.
- 3. Temperature Guidelines:** Use the device and accessories within the specified temperature range. Equipment failure may occur if the ambient temperature is too high or too low.
- 4. Battery Replacement:** If the battery is not detachable, do not attempt to replace it yourself to avoid damage to the battery or device.

Battery replacements should only be performed by authorized service centers.

5. Device Maintenance: Do not disassemble the product or its accessories.

If the equipment or any of its components are not functioning properly, contact and consult our after-sales service center, or send the device to one of our service outlets for testing and servicing.

6. Battery Safety: If the battery exhibits abnormal signs such as a peculiar smell, overheating, color change, distortion, or leakage, remove it from the charger or the device immediately and cease use.

7. Battery Handling: The battery is made from flammable and explosive materials. Do not disassemble, squeeze, drop, or perform any other destructive operations on the battery. Avoid placing the battery in high-temperature environments.

8. Battery Disposal: The disposal of used batteries must comply with local regulations and policies regarding battery disposal.

Warranty Policy

Warranty Terms:

- 1. Warranty Period:** Under normal circumstances, the warranty period for the device is 12 months and 3 months for accessories, subject to the terms of the sales agreement.
- 2. Coverage Under warranty:** During the product warranty period, under normal usage conditions (as determined by our technical staff), the user will be entitled to a free warranty for damaged or faulty parts.
- 3. Exclusions from Warranty:** Faults caused by unauthorized repair, disassembly, or modification of the product by personnel other than our company, improper installation, improper use by the user (failure to follow instructions), serial number damage, accidents, or natural disasters will not be covered under the warranty.
- 4. Warranty Void Conditions:** The warranty will expire immediately if any alterations are made to the warranty card.
- 5. Repair Requirements:** Please present the equipment's serial number (SN) and purchase certificate when requesting repairs. The company reserves the right to interpret the terms of this policy.
- 6. Support Contact:** If you experience any issues using the device, please contact us via email at meferi@meferi.com.