




## CIAO 3-Slot Cradle Quick Start Guide

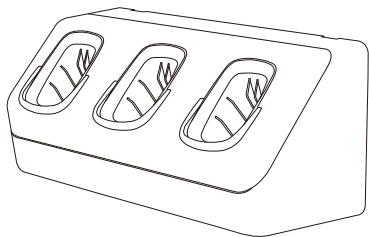

### Overview



Front




Back

### Instruction manual

#### 1. Charging mode


a) Connect the 12V/10A charger terminal to the charging port on the back of the CIAO 3-Slot Cradle. Upon connection, the three status indicators on the CIAO 3-Slot Cradle will light up simultaneously, indicating that the 12V/10A charger is successfully connected.

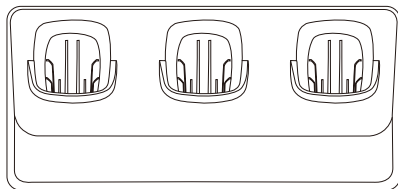

b) Charging the CIAO Device:

- Insert the CIAO device into the bracket slot. The CIAO will then enter the charging state.
- The status indicator on the CIAO will light up while charging. It shows red when not fully charged and turns green once fully charged.

**Note:** The 12V/10A charger has three terminals and can support simultaneous charging of up to three CIAO 3-Slot Cradles.

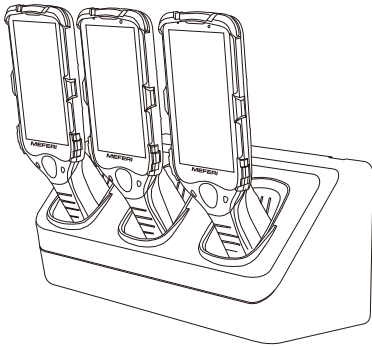

## 2. Electronic Lock Function:

### a) Locking Process:


- When the CIAO device is inserted into a slot of the CIAO 3-Slot Cradle for charging, the cradle automatically engages a safety lock, securing the CIAO device within the charger.

### b) Unlocking Process:


- To remove the CIAO device, it must be manually unlocked using the application on the device.

### c) Steps to Unlock:

- Open the Serial Tools application on the CIAO device and navigate to the "CRADLE Unlock" function module.
- Click on "Unlock Cradle" to disengage the lock.

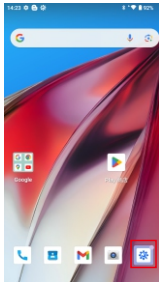

## Unlock step 2: Click Unlock Cradle

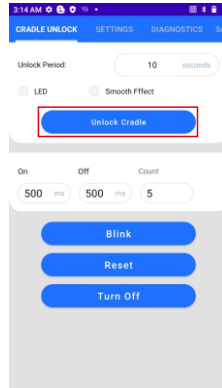

## Unlock Completion:

After receiving the unlock command, the status indicator on the CIAO 3-Slot Cradle will flash as a warning. The charged CIAO device can then