


ME61 Single Slot Cradle


Quick Start Guide



Overview

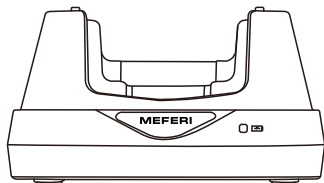

Front



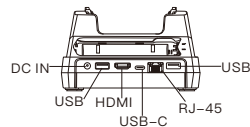


Plastic insert

Charging mode


a) ME61 Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Insert the ME61 device into the cradle slot. The ME61 will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

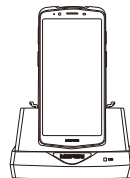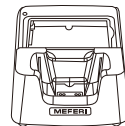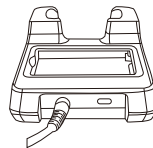


b) ME61 Charging With Protective Rubber Cover:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Then remove the plastic insert from the charging station slot to enlarge the compartment and insert ME61 with a protective rubber cover into the cradle slot. The ME61 will now enter the charging state. The status indicator light on the device will appear red while charging and turn green when fully charged.

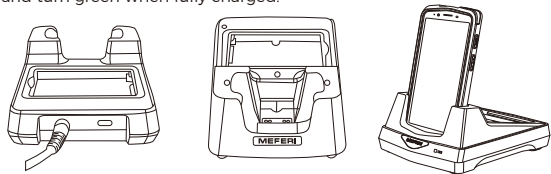


c) Battery Charging:

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light will turn on. Insert the battery into the additional compartment on the top of the cradle, ensuring proper alignment of the battery and charger contact connectors. The battery will now enter the charging state. During charging, the indicator light will appear red and turn green when the battery is fully charged. The battery can be charged independently or simultaneously with the ME61 device.

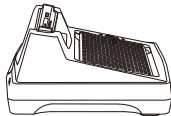

d) Communication mode

Connect the USB data cable to the Type-C interface located on the back of the single-slot cradle. Once connected, the MEFERI logo light on the cradle will illuminate. Whether the ME61 uses accessories such as the pistol grip or protective rubber cover, it can be charged and exchanged data with a PC by simply plugging it into the single slot cradle. It's important to note that during communication mode, the single-slot cradle cannot charge the battery.

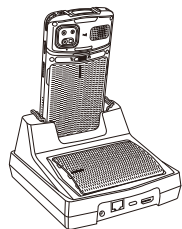

e) Desktop mode

Connect the 12V/2A charger to the DC interface located on the back of the single-slot cradle, connect the HDMI interface to the computer monitor with an HDMI cable, connect the two USB interfaces to the mouse and keyboard respectively, connect the Ethernet interface to the network cable, and then insert the ME61 device into the cradle slot. The device and battery can also be charged while using desktop mode.

