

CIAO Standard Holder Quick Start Guide



Overview




Front




Back

Instructions

1. Select the Appropriate Plastic Mount Part: Choose one of the appropriate plastic mount parts (diameters 27, 30, 33, or 36 mm) according to the diameter of the shopping cart push rod. Insert the chosen plastic mount part into the curved handle of the CIAO Standard Holder.

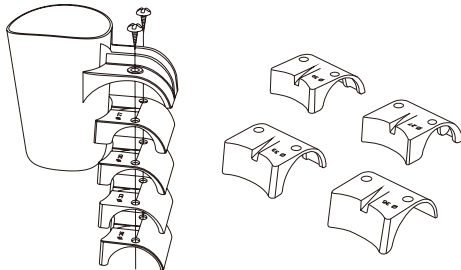

2. Installation Using Screws: Use two M4.8*19.0(+) Philips screws to secure the CIAO Standard Holder onto the shopping cart push rod.

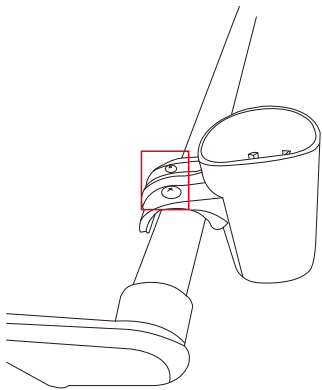

3. Completion of Installation: Once installed, the CIAO device can be placed in the CIAO Standard Holder.

